

French VBL Armour Car

フランス VBL 装甲車 法国VBL装甲车

PLEASE READ BEFORE OPERATION! * Tools recommended as below: (Not included)

- Adhesives, Paints, Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes, face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- *推荐使用的模型工具(请自备): 专用模型胶水,专用模型油漆,水口剪刀,长咀钳,刀片, 锉刀,镊子钳,钻,剪刀,软布,砂纸,瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- *用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过量, 否则可能导致可动零件被粘住。
- * 注意某些零件表面需在装配时同步贴上水贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥,谨防小孩玩耍而引起意外。



using ca super glue 使用强力胶



weigh

make hole 钻孔 1

cut / remove 切除 ?

option

X

no cement 不涂胶水

deca

bend

repair


The method to apply the decals


- 1.Cut off the decal from the decal paper and put it into the warm water 40 $^{\circ}$ for 10 seconds.
- 2. Take the decal from the water and put it on a piece of clean cloth.
- 3.Remove the decal slowly from the paper to the targeted location by a wet finger.
 4.Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.


水贴纸的使用方法:


- 一. 把相关的印花从水贴纸上剪下,放入40℃左右的 温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三.拿上印花纸板,手指蘸水将印花移到适当的位置。
- 四.用软干布轻压印花直至水干,气泡消失。


部品图 Parts

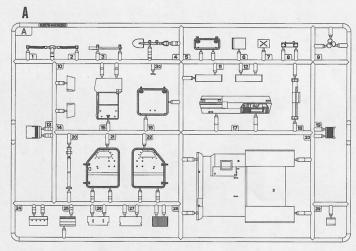


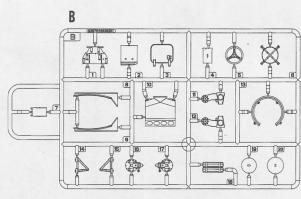


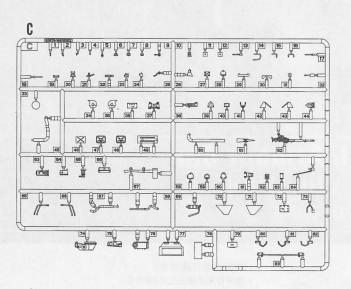


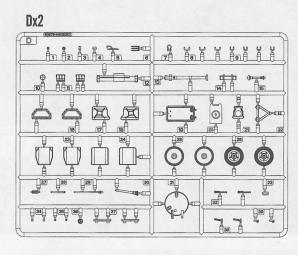

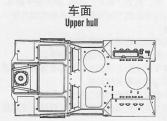





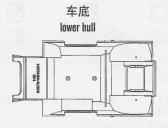














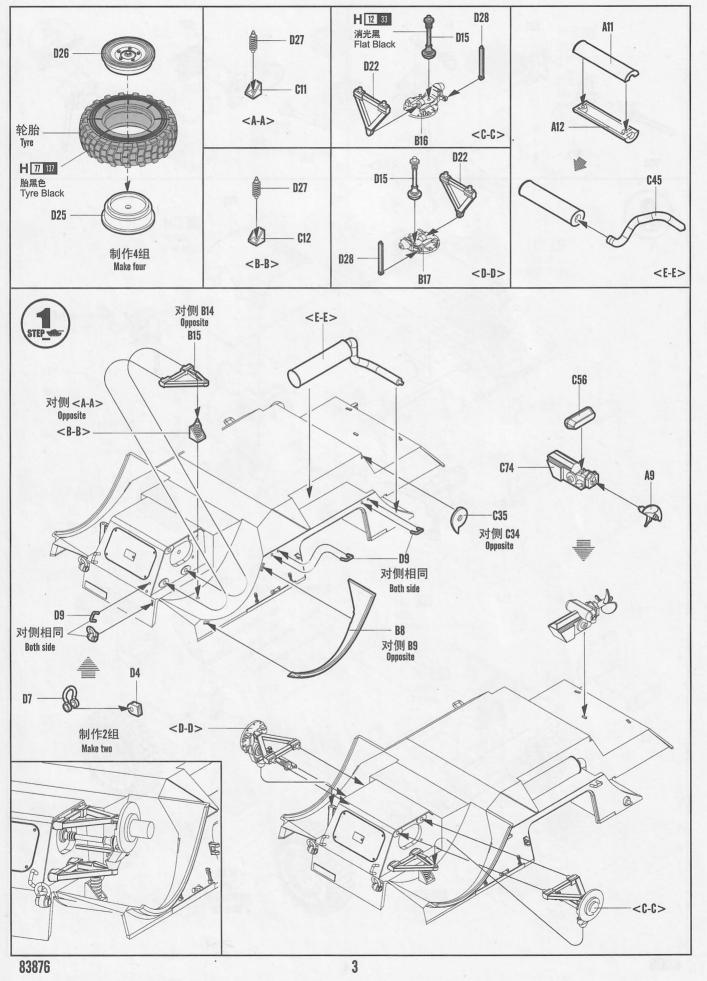


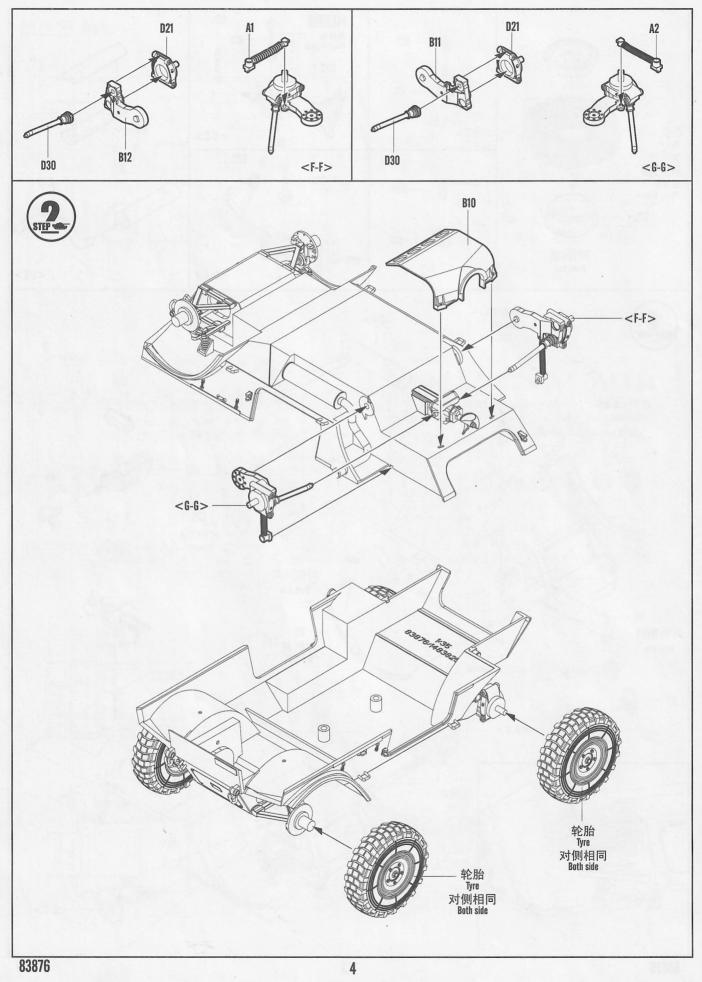


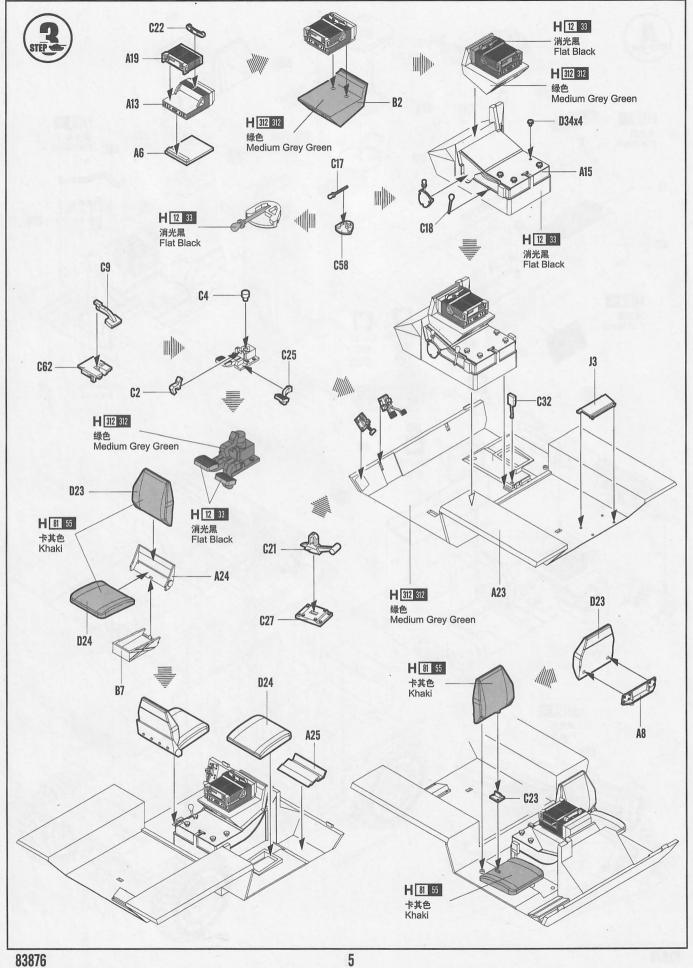


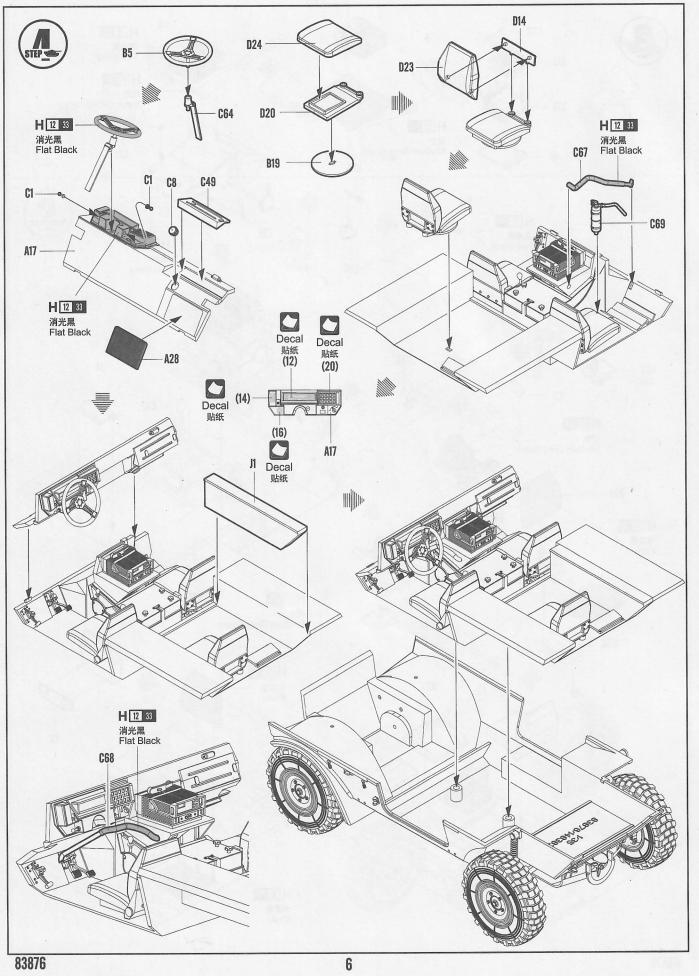


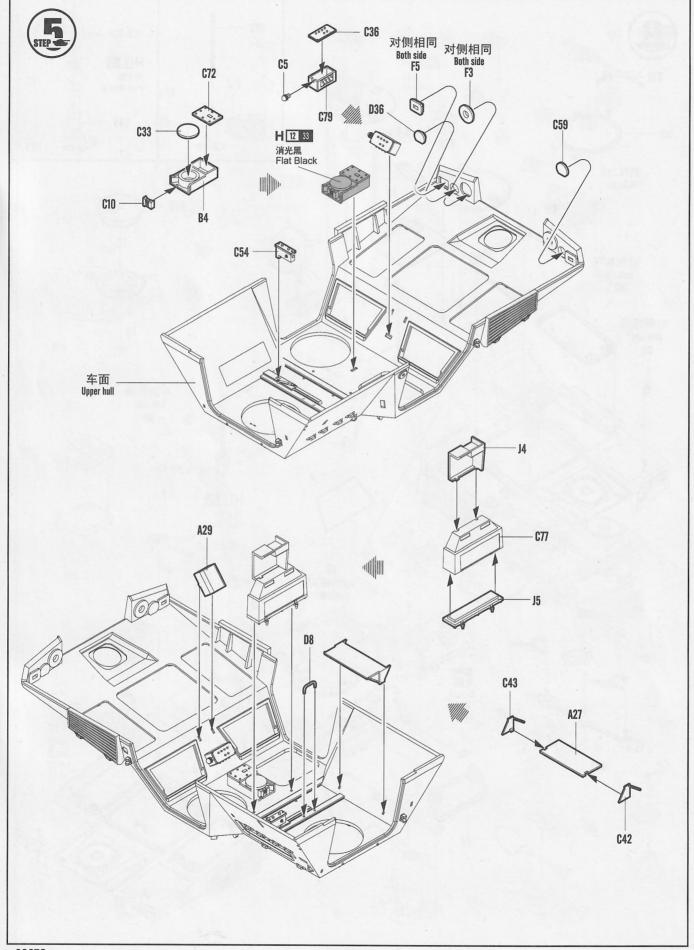


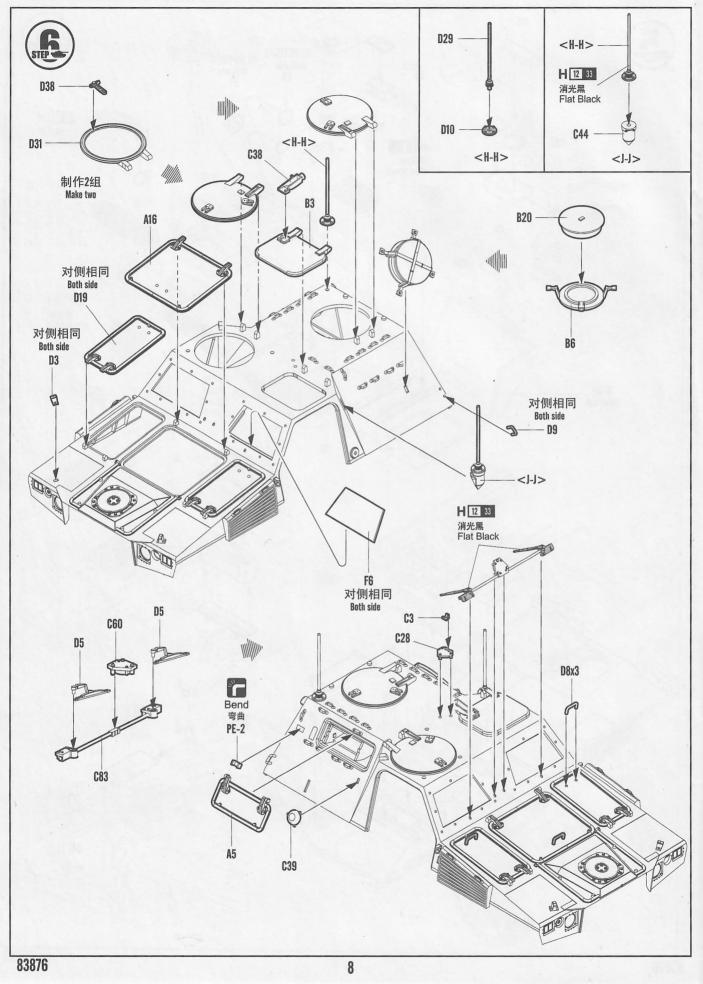


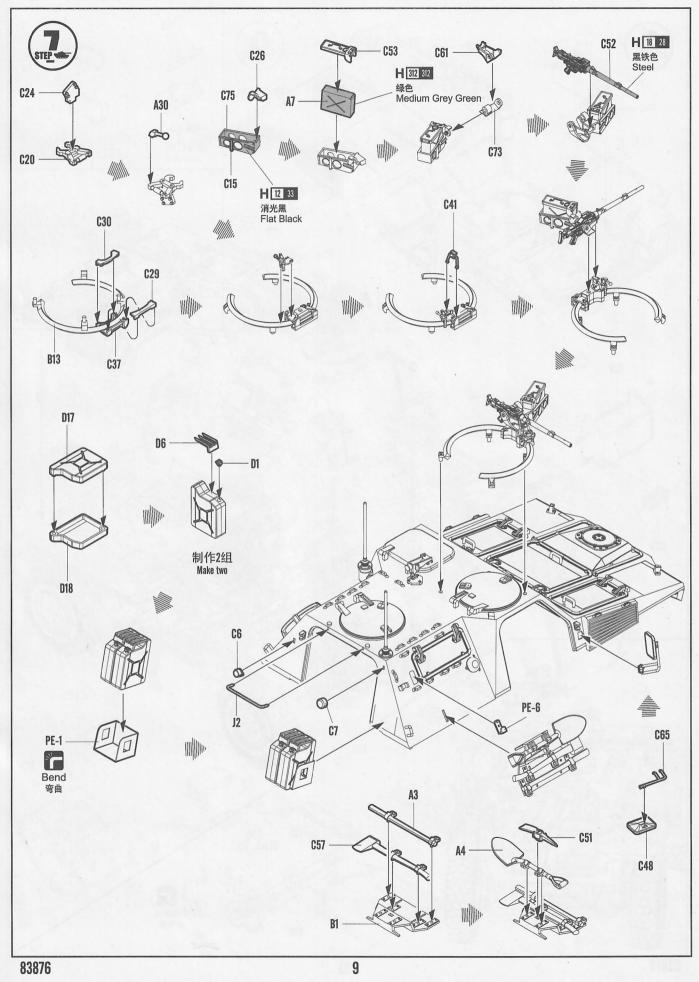

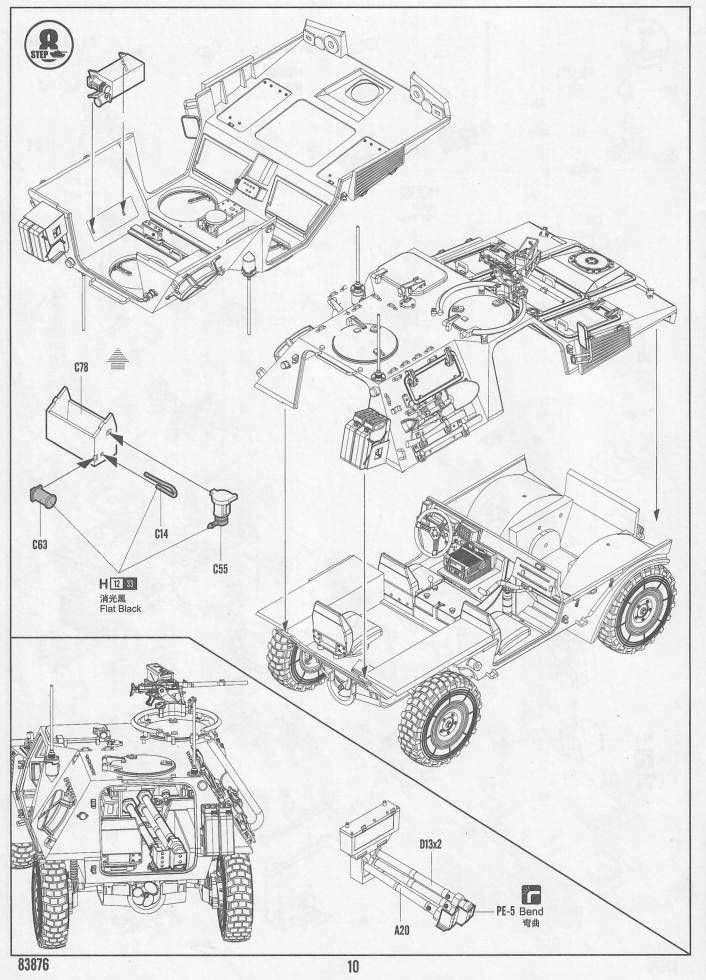

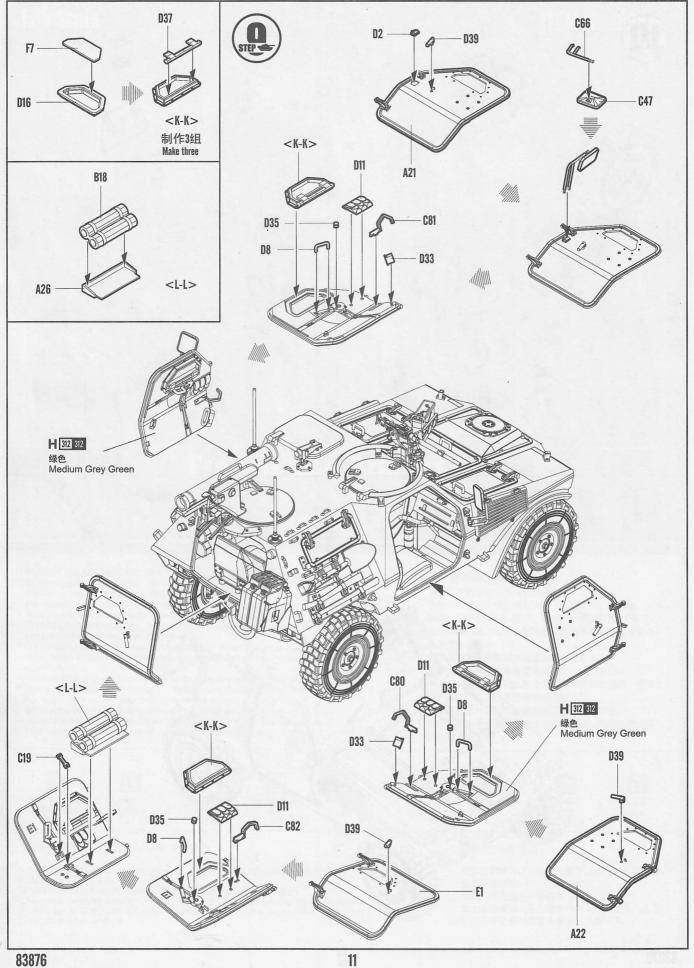

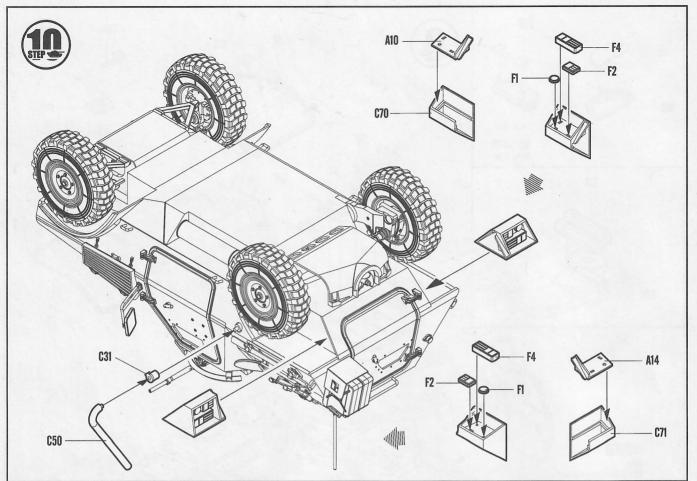

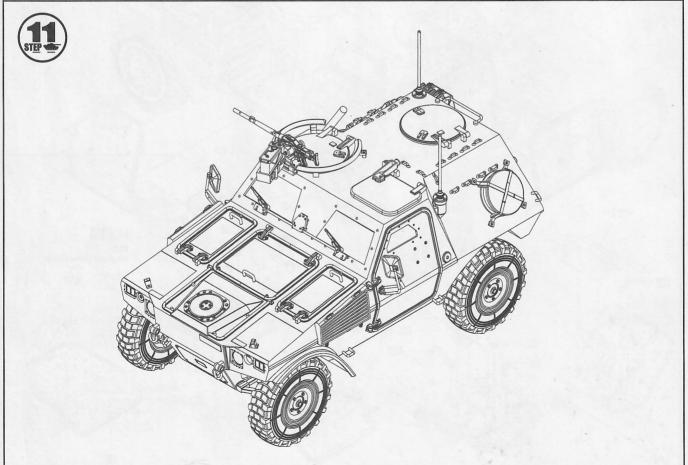


French VBL Armour Car

フランス VBL 装甲車 法国VBL装甲车

HOBBY BOSS



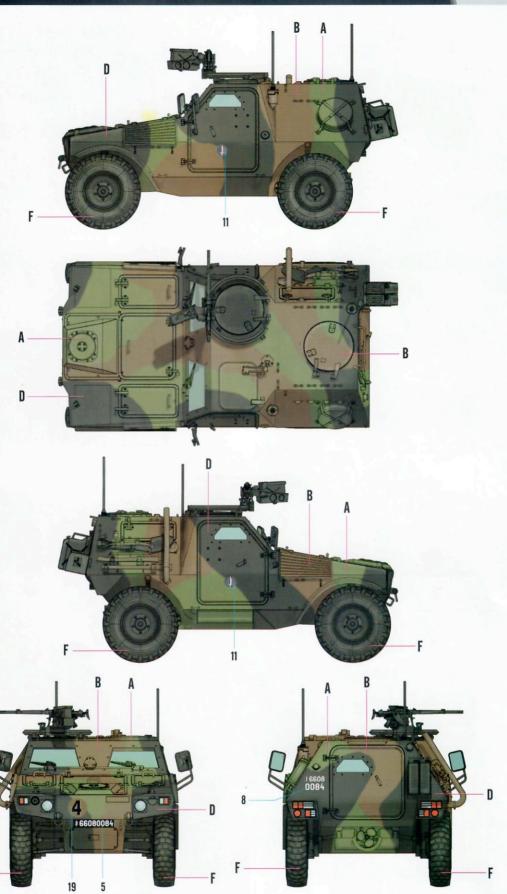

	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol		Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
A	绿色 Light Green	H 312 312		1713	XF20	117	D	消光黑 Flat Black	H 12 33	950	1749	XF1	33
В	木棕色 Wood Brown	H 37 43	983	1701		186	E	白色 White	H11	842	1745	XF2	22
C	暗绿色 Forest Green	H 309 309	893	1710	XF58	116	F	胎黑色 Tire Black	H 77 137				


标贴与涂装 **MARKING & PAINTING**


NO.:83876


French VBL Armour Car フランス VBL 装甲車

法国VBL装甲车

HOBBY BOSS

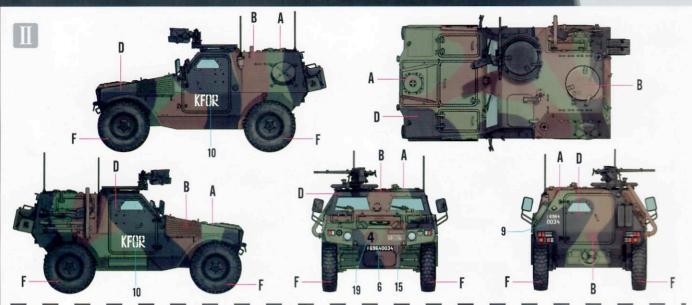

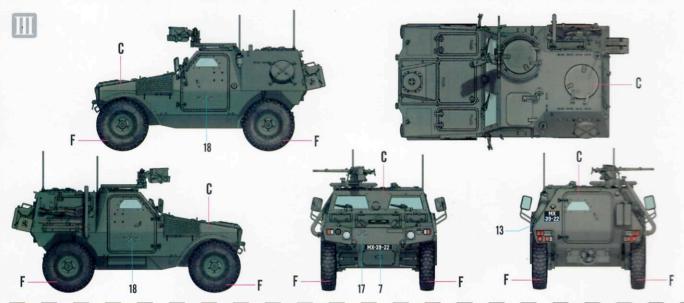

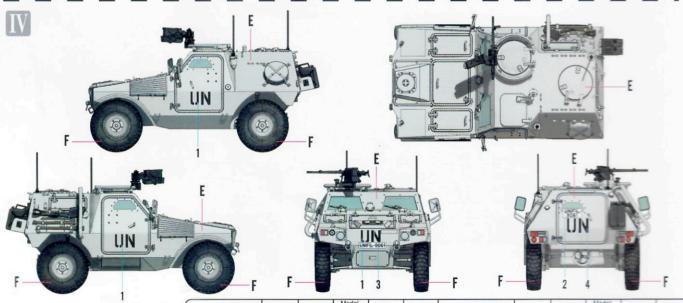

Color Mr.Hobby Tamiya Color 绿色 Light Green 木棕色 Wood Brown H 312 312 消光黑 Flat Black H 12 33 117 950 33 XF20 1713 白色 H 37 43 暗绿色 Forest Gree H 309 309 1710 116 H 77 137

*Some paints may not be available in your country. Please check your local hobby shop for su