

X32069

Gloster Gladiator



For the best results these decals should be applied to a gloss surface such as provided by either Xtracolor or Xtracrylix paints. Cut out the decal required and soak in warm water until the decal is released from the backing paper. Wet the area to be decaled with MICRO SET which will help to eliminate air trapped under the decal and position the decal.

After 5 or 10 minutes wet the decal with MICRO SOL which will soften the decal and ensure that it settles down over any surface detail. Allow the decal to dry for at least 12 hours. During this time some wrinkling of the decal may occur, this is normal. Do not touch the decal at this time.

Carefully check for small air bubbles and if there are any prick with a needle and apply a drop of MICRO SOL. After all air bubbles have been eliminated and the decals are dry wash the entire model with water to remove any excess decal adhesive.

When completely dry the whole model should be sprayed with a coat of Xtracolor or Xtracrylix Flat, Satin or Gloss varnish depending on the finish required.

Store in a cool dry place, avoid sunlight, dampness or extremes of temperature and/or humidity.




Harbour Road, Oulton Broad, Lowestoft, Suffolk, NR32 3LZ


Phone +44 1502 517444

Fax +44 1502 500521

www.hannants.co.uk

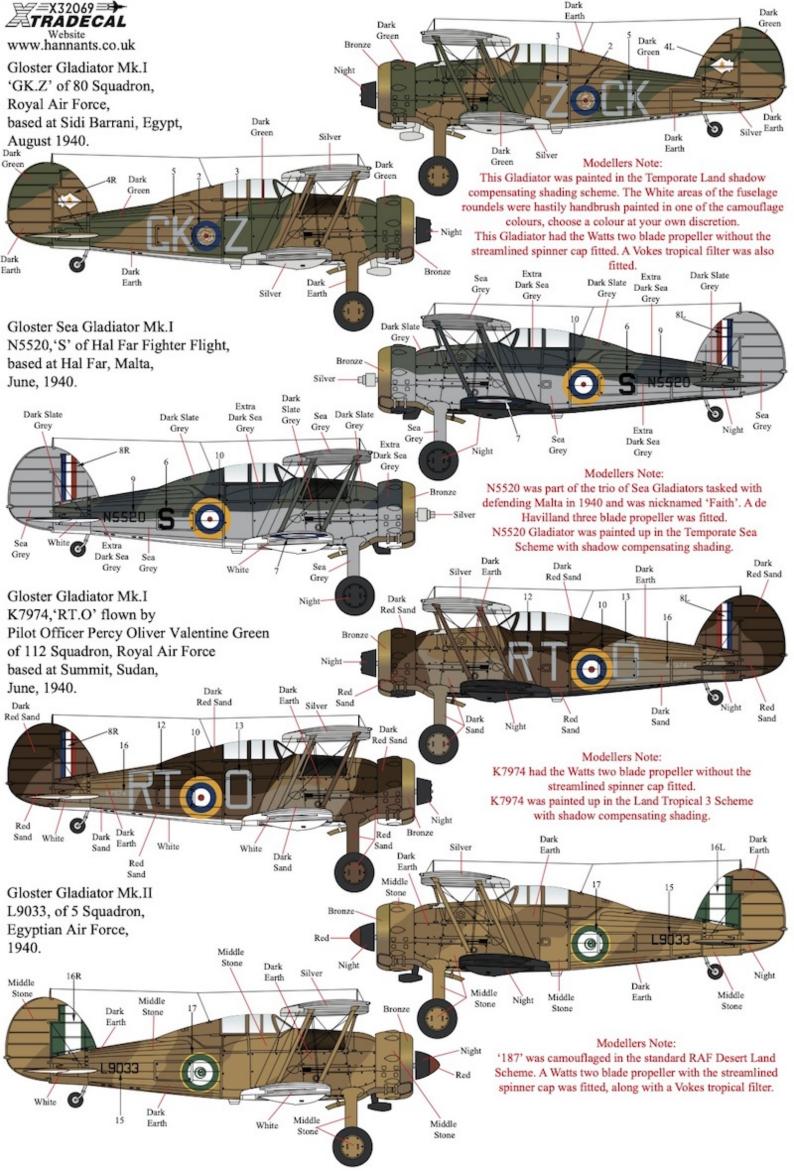



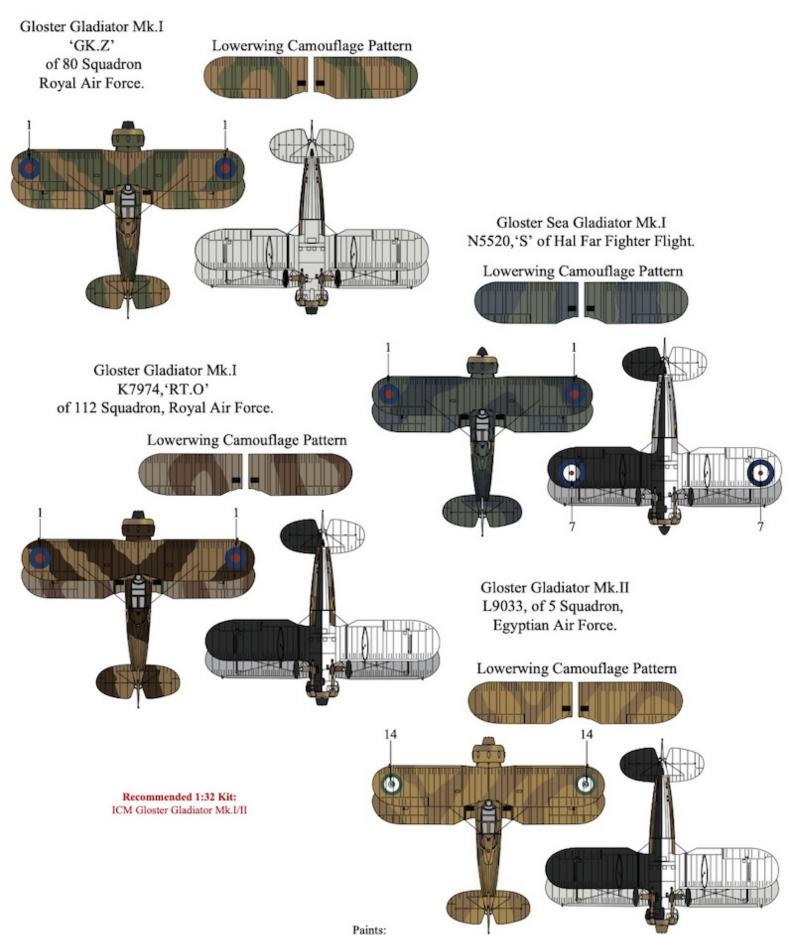

The colours used on these aircraft can be found in the Xtracolor (prefix number with X) and Xtracrylix (prefix number with XA1) range of paints.

X001 Dark Green X002 Dark Earth X004 Dark Sea Grey X005 Extra Dark Sea Grey X009 Middle Stone X012 Night Black X025 Dark Slate Grey

Xtracolor Paints

X029 Light Stone X037 Light Slate Grey X141 White

XA1002 Dark Earth X501 Silver XA1005 Extra Dark Sea Grey XA1009 Middle Stone

Xtracrylix Paints XA1001 Dark Green XA1029 Light Stone XA1037 Light Slate Grey XA1004 Dark Sea Grey XA1141 White

XA1012 Night Black XA1025 Dark Slate Grey