

LIMITED EDITION!


CED48247

# He 111


## "Pencil Noses" Part 4



He 111 E-1  
I./KG 1

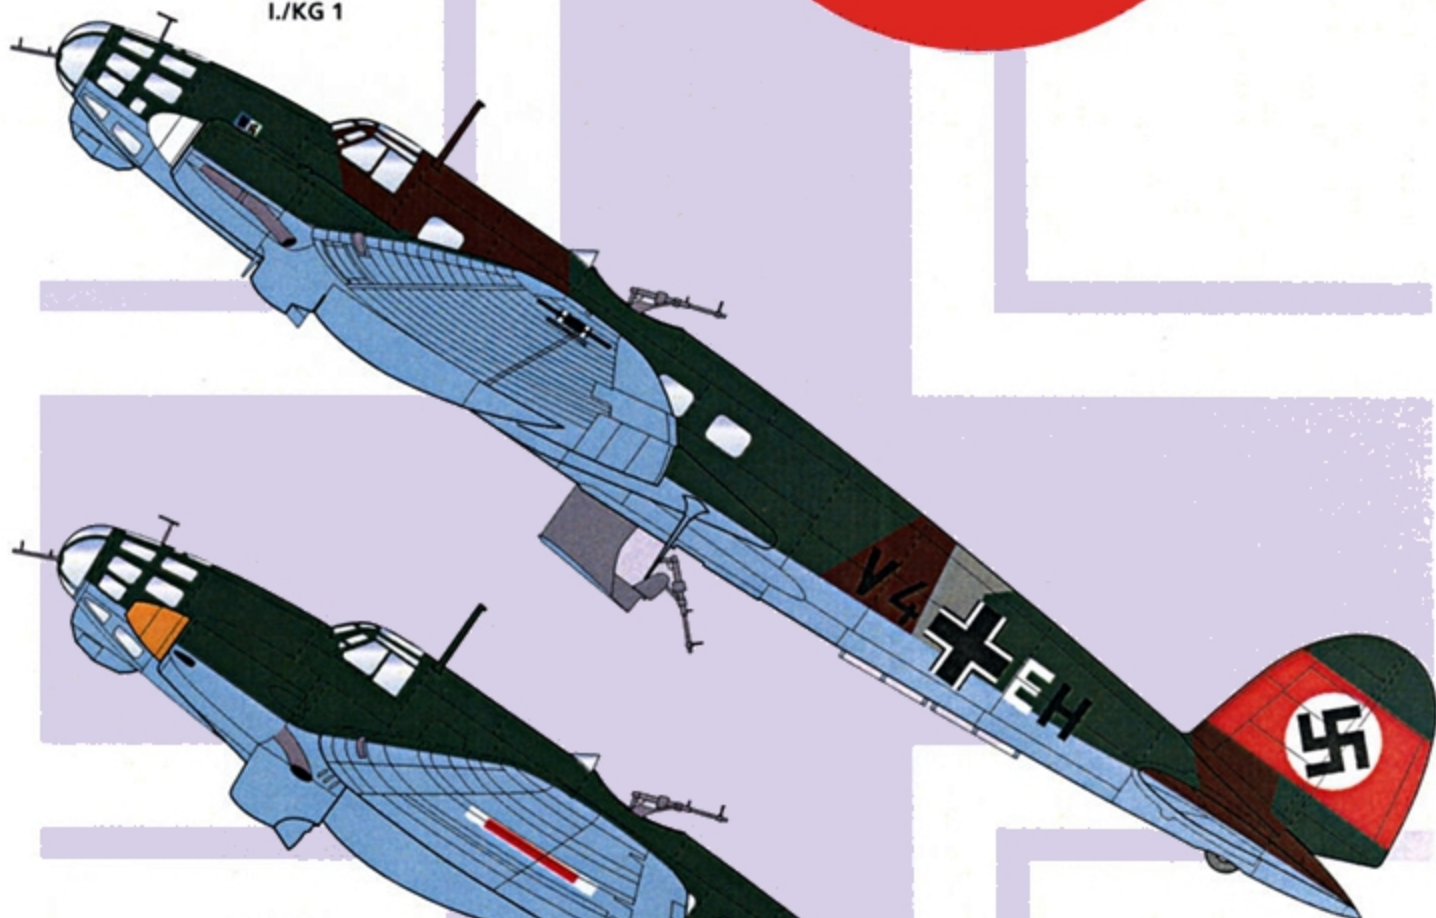

He 111 F  
Turkish Air Force

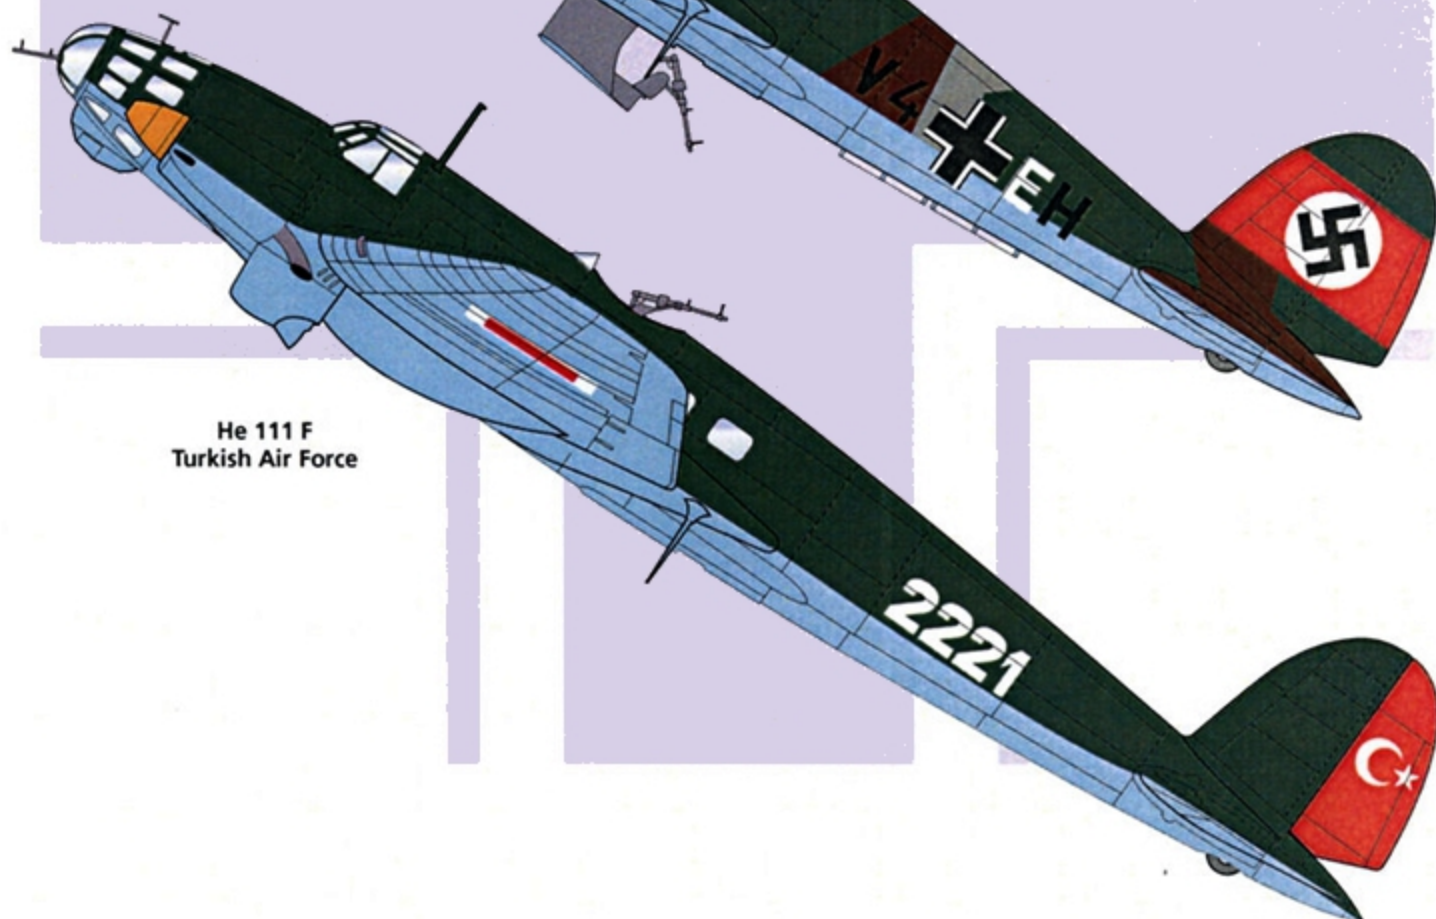

Recommended kit:  
Monogram He 111H kit with  
Cutting Edge He 111 E or  
He 111 F conversion sets

**Cutting  
Edge**

®

P.O. Box 3956  
Merrifield, VA 22116  
USA



MODELWORKS [www.meteorprod.com](http://www.meteorprod.com)




# He 111 Pencil Noses Part 4

- Original version of tail marking had red band with white disk under swastika. This was later painted over with a dark color (probably RLM 70 or 71 [?]).

**He 111 E-1**  
I./KG 1

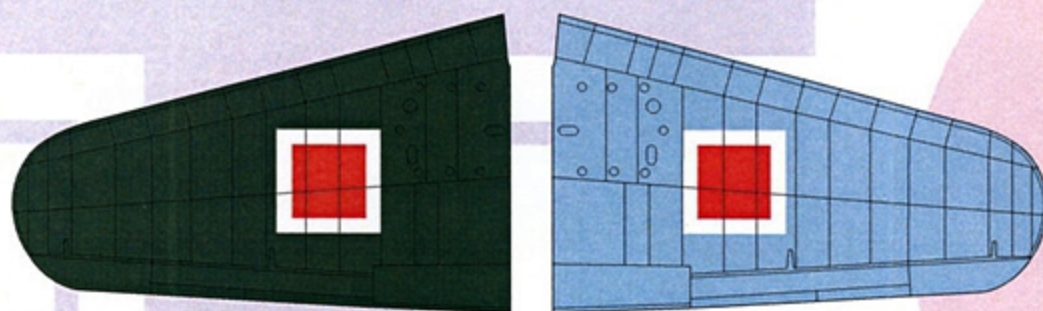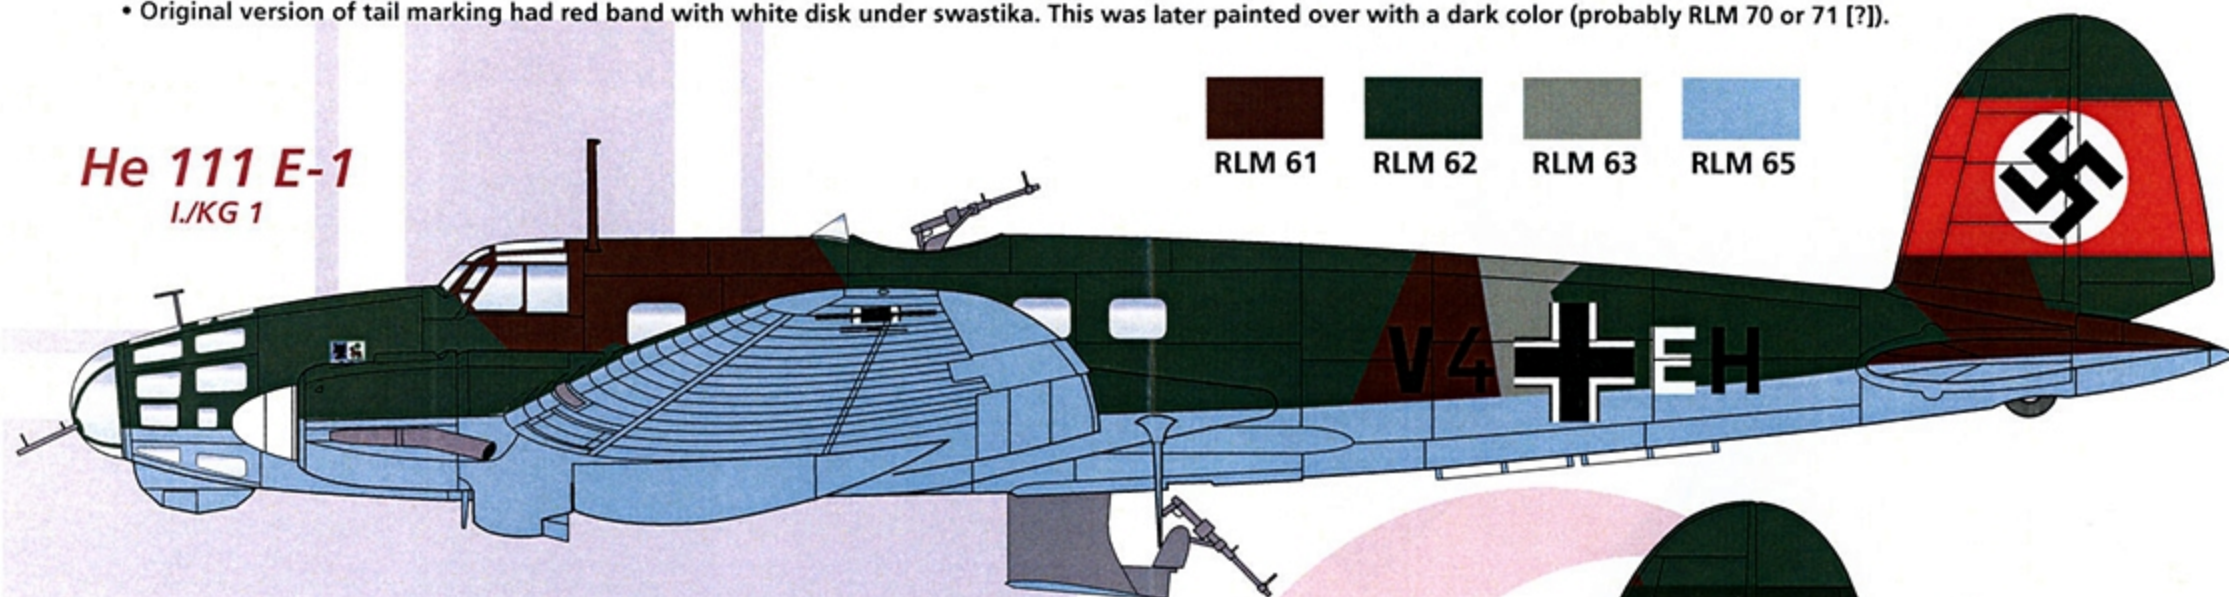


**He 111 F**  
Turkish Air Force

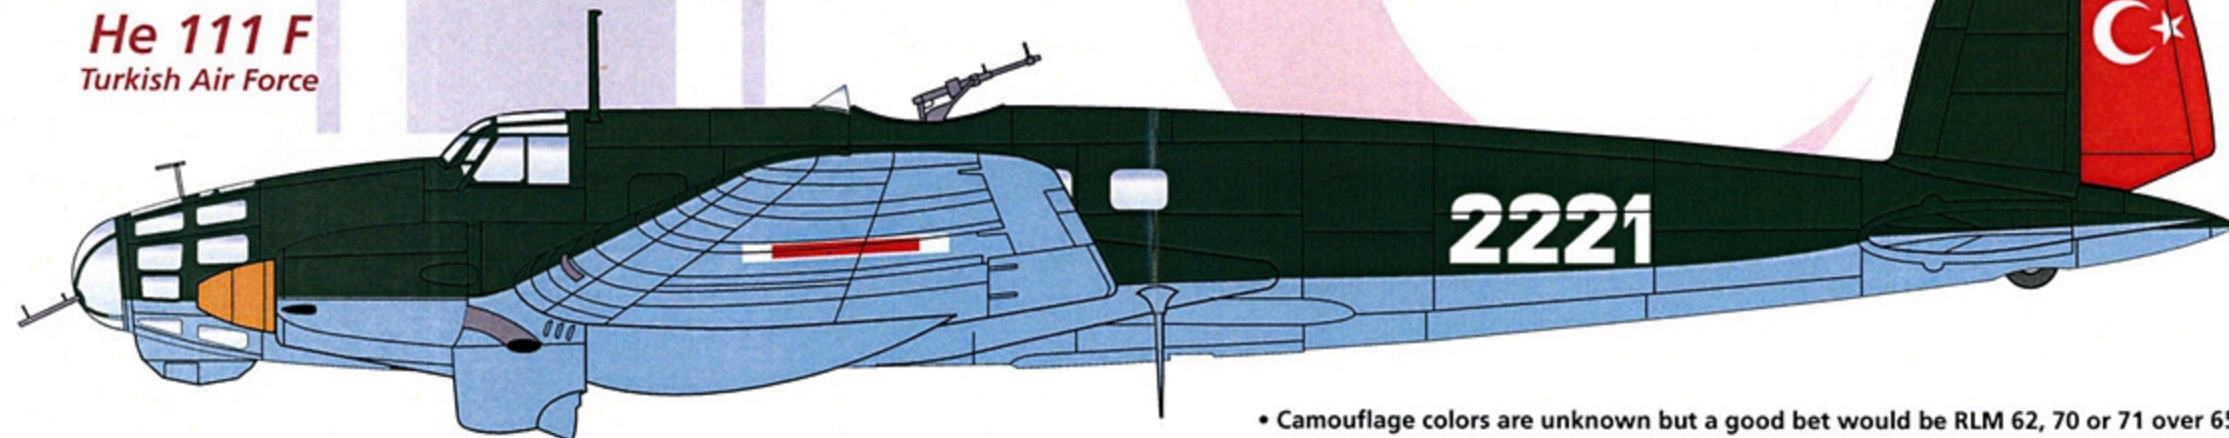

- Camouflage colors are unknown but a good bet would be RLM 62, 70 or 71 over 65.

- The spinner color is unknown, but was almost certainly not the red in the insignia. Yellow is one possibility, although a Turkish researcher believes it was natural metal.



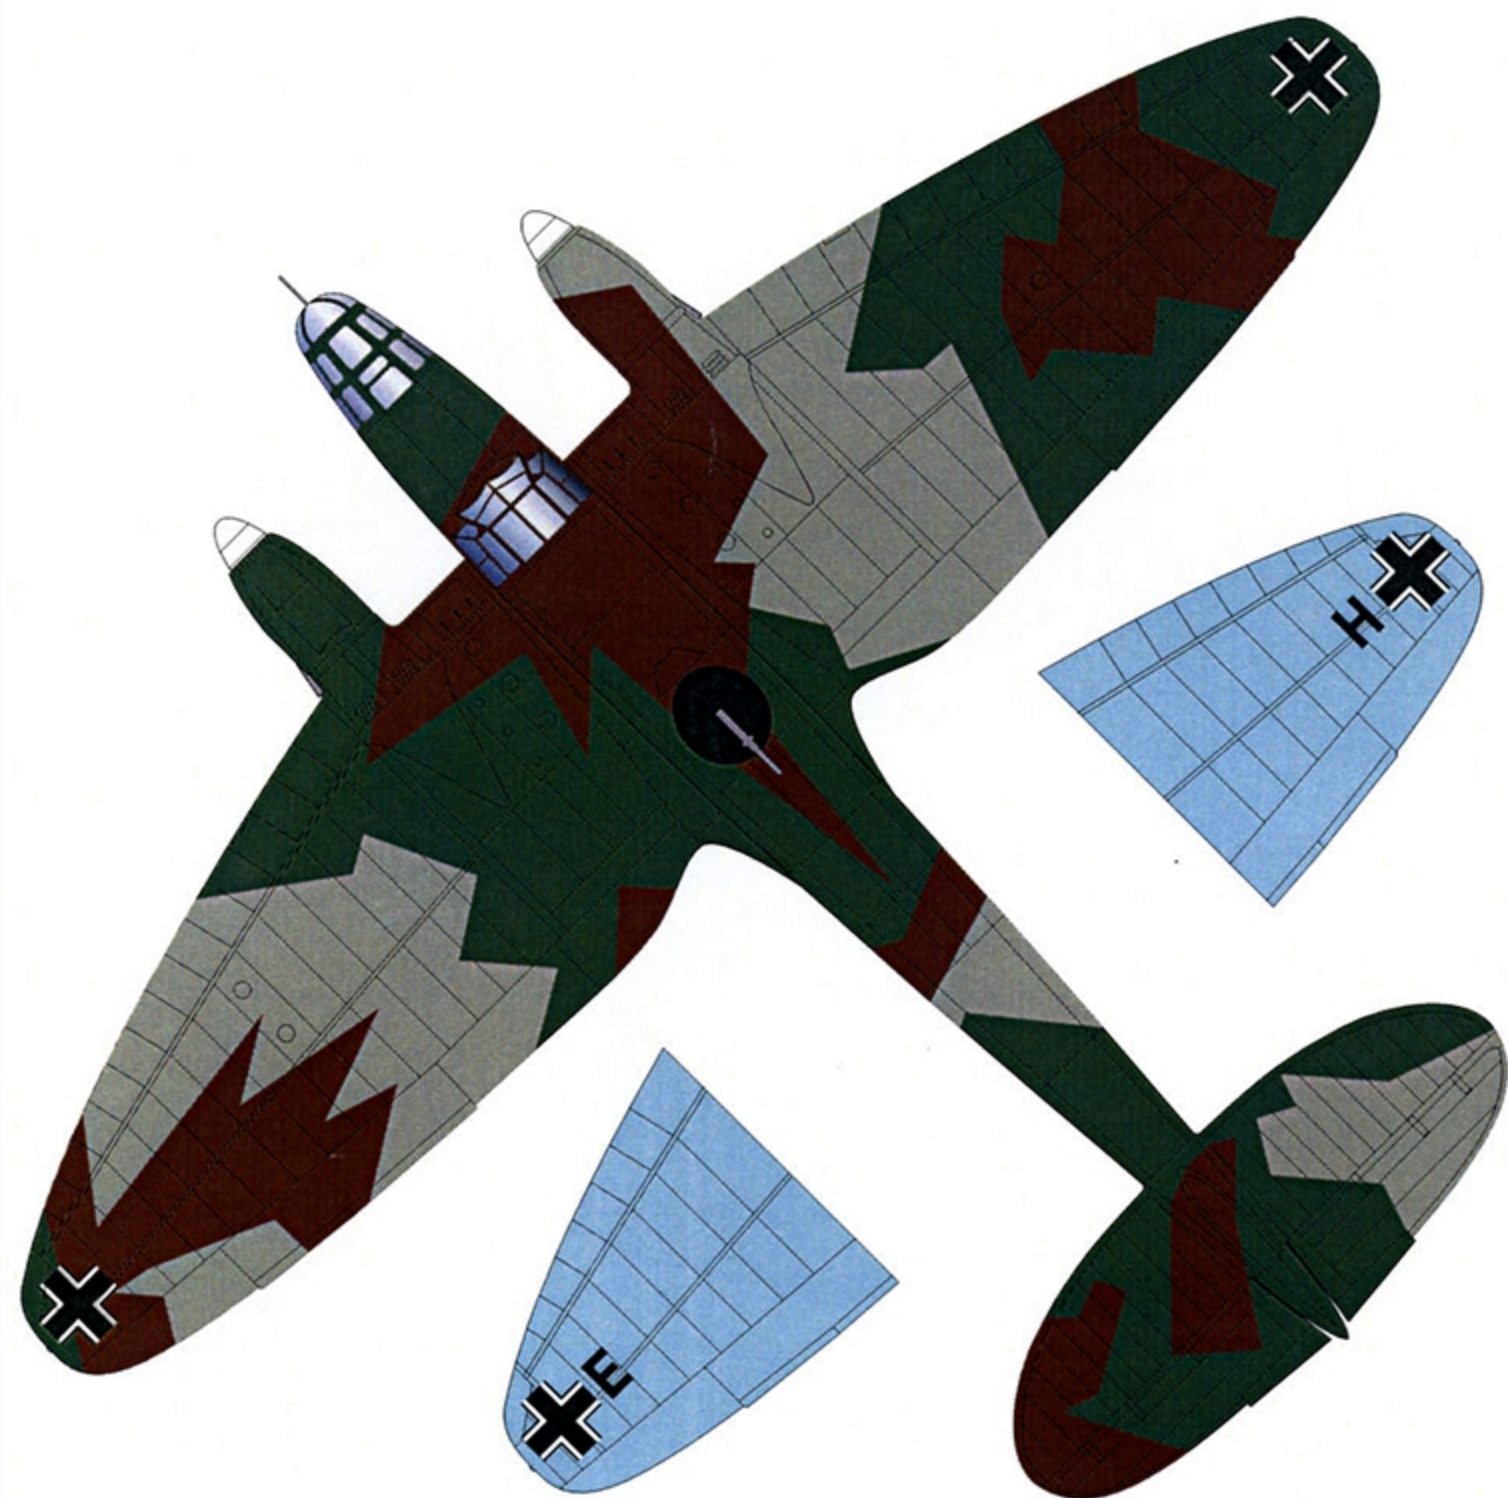

...available from

**Meteor**  
 **Productions**  
Inc.

P.O. Box 3956, Merrifield, VA 22116 USA

☎ 703/971-0500 FAX 703/971-8111

[www.meteorprod.com](http://www.meteorprod.com)

*Write, call, or visit our home page to  
 order our 120+ page catalog of decals,  
 kits, conversions, tools, books,  
 magazines, etc., and we'll send it to you  
 right away!*

© Cutting Edge Modelworks, 2003



## V4+EH

- Early version of tail marking was later toned down to the 'standard' swastika work throughout most of the war.
- Spinner was painted in the staffel color (white)-the same as the individual aircraft letter 'E'.

## Applying the Decals

You probably already know all this stuff, so feel free to use your regular process; however, if you're new to aftermarket decals, here goes:

- Generally, use the Microscale Finishing System. We don't recommend extremely strong decal solvents such as Solvaset.
- Your model must have a smooth, glossy surface, as decals won't adhere well to matte surfaces. Use gloss paints or your favorite clear gloss overspray over matte or semigloss paint.
- Cut each subject out without trimming off the slight excess film (this helps the decal film disappear when dry).
- Put the decal in warm water that has a drop or two of liquid dishwashing soap or photo-flo for 10 seconds.
- When the decal will slide off the backing paper without forcing it, apply it to the proper position on your model. Slide the backing paper out from underneath.
- Gently blot off excess water and smooth out bubbles under the decal surface. If you wish, carefully brush on a mild decal softener such as Micro-Sol.
- When all decals are completely dry, gently wash off all excess decal adhesive.
- Finally, overcoat your model with a good quality gloss coat, followed by your choice of matte or eggshell clear topcoat.

## FS 595 Color Cross Reference

RLM 61 Xtracolor X219, Floquil 303238, Polly Scale 505300  
RLM 62 Xtracolor X220, Floquil 303239, Polly Scale 505302  
RLM 63 Xtracolor X221, Floquil 303240, Polly Scale 505304  
RLM 65 Xtracolor X202, Floquil 303245, Polly Scale 505051

## Bibliography

Aircraft Monograph #2 Heinkel He 111 by Robert Miculec. AJ Press, 1994.  
Monografie Lotnicze #12 Heinkel He 111 by Robert Miculec.  
Condor-The Luftwaffe in Spain 1936-1939 by Patrick Laureau. Hikoki Publications, 2000.  
Wings Over Spain by Emiliani Ghergo. Giorgio Apostolo Editore, 1997.  
Photos supplied by Kursad Albayraktaroglu of Turkish He 111 Fs.