


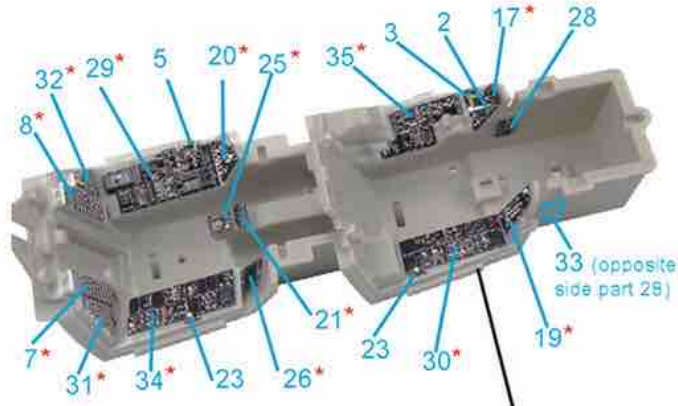


A00 - kit's part #


\* - remove relief from kit part first




H3+H7+H25+H26+H27+  
H28+H29+H32+H33+H34+K13+K16+K17

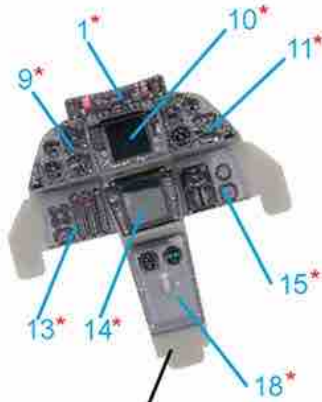

K11+K12

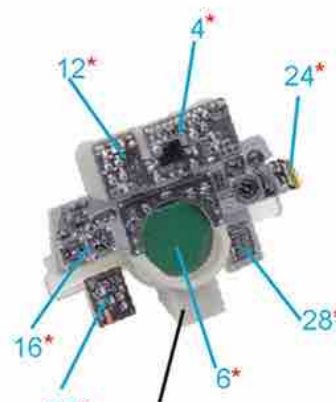

K18+H31+J2

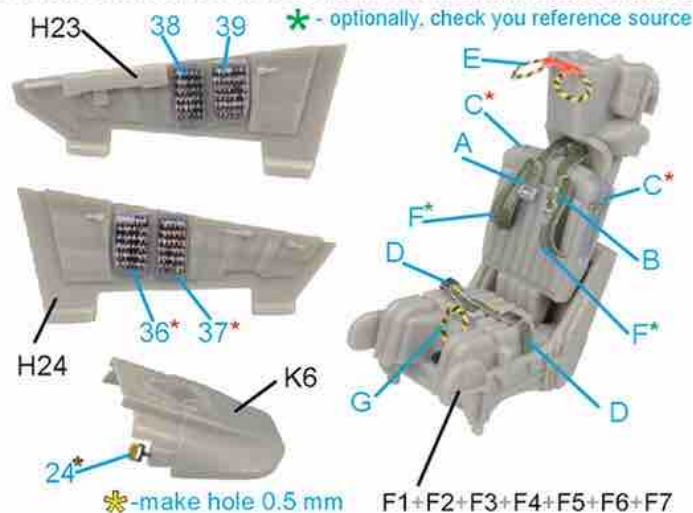

\* - optionally, check you reference source

✿ - make hole 0.5 mm

F1+F2+F3+F4+F5+F6+F7